

J310: 8+2 Way Weatherproof Conduit Junction Box  
J320: 16+4 Way Weatherproof Conduit Junction Box


## INSTALLATION

To install, remove the junction box lid and drill appropriate fitting holes in the mounting surface. Screw the base to the surface.

Connect the TMP terminals to a tamper detection circuit. If using J320, only a single tamper circuit needs to be connected. The PCB mounted spring will break the tamper circuit when the lid is lifted from the unit.

Wire to suit your installation, inserting conduit ends into the base. Replace & screw down the junction box lid to clamp the conduit connectors in place.

## DIAGRAM

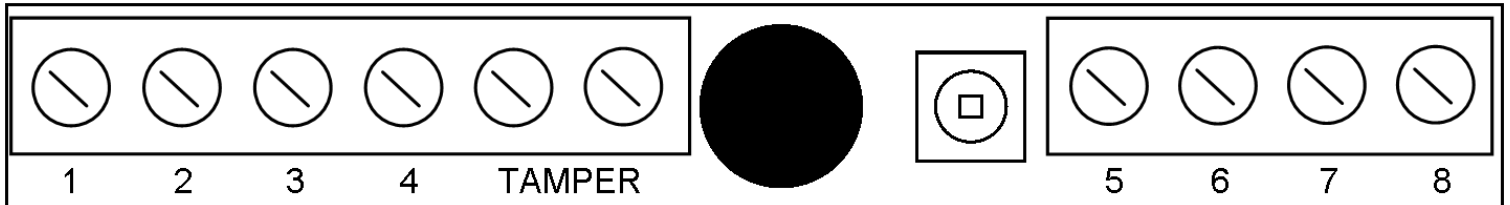

## NOTES

Ensure wiring does not short other connections inside the unit.

J320 includes two identical PCBs as per the above diagram.